

Changing Language of Creative Webcam Menu

Keywords / Key Phrases: application menu, software menu, different languages, foreign language, distorted language characters, question marks

1. Uninstall the drivers from the **Device Manager**.

How to access Device Manager:

Right Click on **My Computer** > Select **Properties** > **Hardware** Tab > **Device Manager**.

2. Insert the Installation CD into your CD-ROM drive. Your CD should start automatically.
3. Follow the instructions on the screen to install drivers and applications and ensure that you have selected **English** from the language selection during installation.

Last updated: July 23, 2010