

Live! Cam software menus displaying question marks

Keywords / Key Phrases: software, menu, question mark

When using Live! Cam software if some menu options are displayed as questions marks, do the following.

1. Reinstall Directx. For more information on Directx see [DirectX Frequently Asked Questions](#).

2. Reinstall Live cam software and drivers.

Insert the Installation CD into your CD-ROM drive. Your CD should start automatically. If it does not Double-click the **My Computer** icon and Right-click the CD-ROM/DVD-ROM drive icon, and then click **Autoplay**.

Follow the instructions on the screen to install drivers and applications.

Restart your computer after all the applications have been installed.

Last updated: July 07, 2009