

 
Setting up Parental Control in Live! Central 3

Keywords / Key Phrases: live central 3, parental control, disable, enable, password, cam, chat


Summary:

- ✓ **Applicable To:** Live! Cam Connect HD, Live! Cam inPerson HD, Live! Cam Socialize HD 1080, Live! Cam Socialize HD AF, Live! Cam Socialize HD, Live! Cam Socialize, Live! Cam Optia AF, Live! Cam Video IM Ultra, Live! Cam Notebook Pro, Live! Cam Chat HD
- ✓ This article provides steps on how to enable and disable Parental Control in Live! Central 3.

1. On the **Windows taskbar**, right clicking on the **Live! Central 3 icon** will provide an option to **enable Parental Control**.

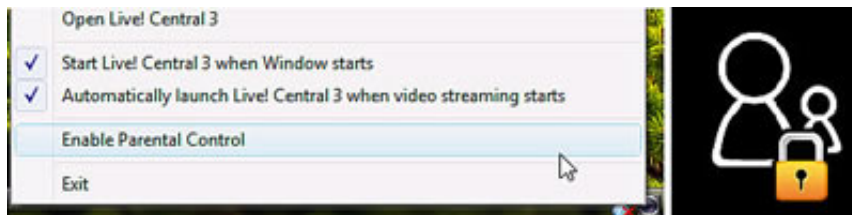

 Alternatively, launch Live! Central, go to **Settings** and click the option for **Parental Control**.

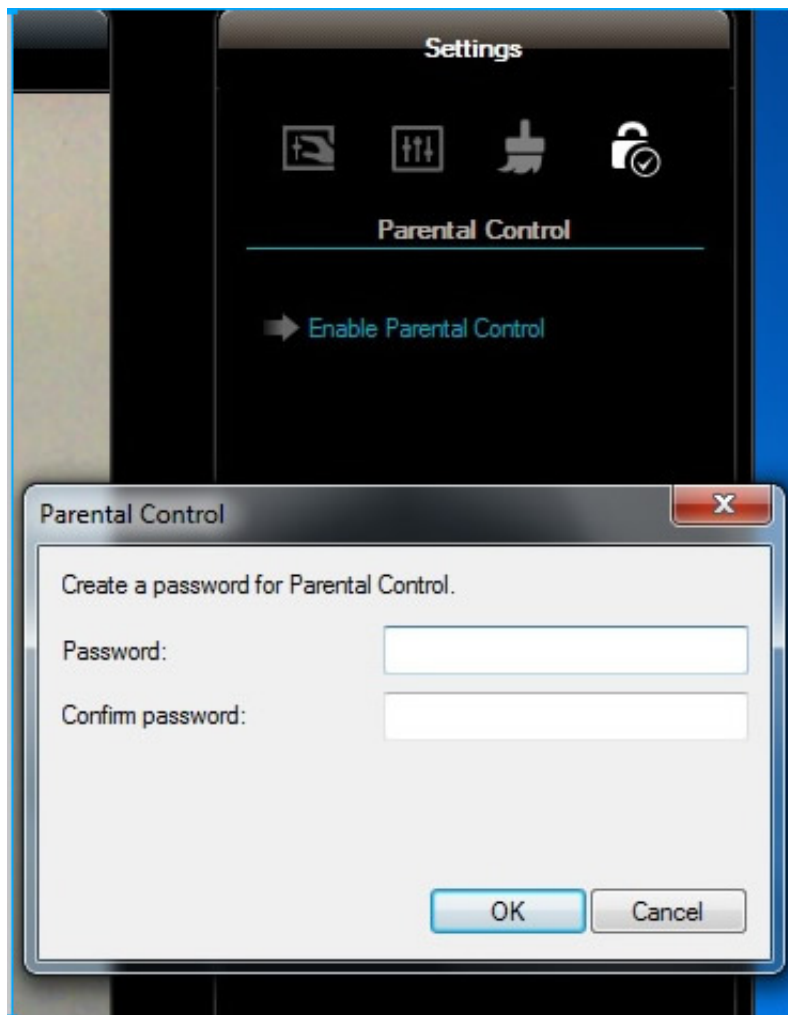


2. You will need to set a **password** before **Parental Control** can be activated.



You need **at least 6 characters** to set the password.



3. Once the **Parental Control** is activated, whenever **Live! Central 3** is launched; the software will prompt for password before it can continue. If you need to disable the **Parental Control**, simply right click **Live! Central 3** icon again and then select “**Disable Parental Control**”. You will need to enter the **correct password** before you are allowed to disable it.

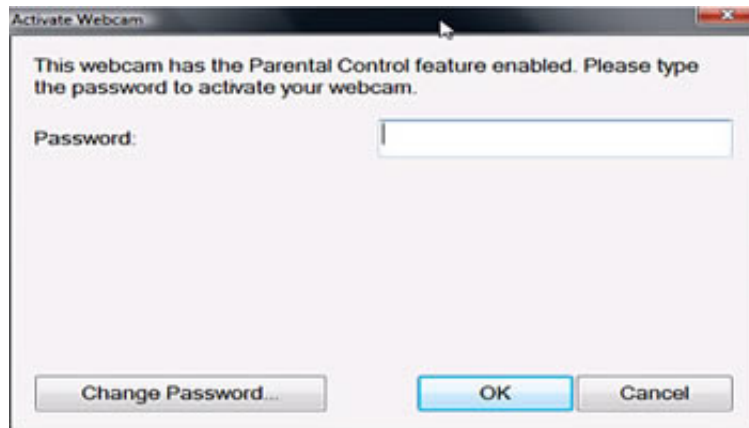

Click on “**Change Password**” if you need to renew password.

