

Video Image Flickering

Keywords / Key Phrases: video image flickering, flicker, wavy, static

1. Check if the **Advanced Video FX** is activated. Please turn off any special effects and take a picture / video.

In **Live!Cam Center** click **Tools - Console**



[Click to enlarge](#)

Uncheck the box beside **Enable Video FX**.



[Click to enlarge](#)

2. Adjust the frame rate of the video to improve the video quality and prevent it from flickering. The frame rate controls the speed which the video is being displayed on your webcam. The slower the frame rate, the more jerky the video appears. Adjust the frame rate before adjusting the brightness and contrast of the video.

In **Live!Cam Center** click **Tools - Video Format**



[Click to enlarge](#)

Adjust to a higher frame rate.



[Click to enlarge](#)

3. Capture the video or photo in a well-lit room where there is enough lighting. In a dimmer environment, the webcam will need to adjust constantly to ensure the subject is adequately prominently. This may result in flickering video.

Last updated: June 24th, 2009